



---

**10BASE-T1S**  
**Ethernet PHY Transceiver**  
**LAN8670 USB Evaluation Board**  
**(EVB-LAN8670-USB)**

**User's Guide**

Note: This User's Guide, although specific to the LAN8670, can provide some useful information for those implementing LAN8671 and LAN8672 within their designs. Please contact [Microchip Support and Sales](#) for additional evaluation board information and for further support with your evaluation needs.

---

**Note the following details of the code protection feature on Microchip products:**

- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip product is strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code. Code protection does not mean that we are guaranteeing the product is "unbreakable" Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

---

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at <https://www.microchip.com/en-us/support/design-help/client-support-services>.

THIS INFORMATION IS PROVIDED BY MICROCHIP "AS IS". MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL LOSS, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY OR THE DAMAGES ARE FORESEEABLE. TO THE FULLEST EXTENT ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

**Trademarks**

The Microchip name and logo, the Microchip logo, Adaptec, AVR, AVR logo, AVR Freaks, BesTime, BitCloud, CryptoMemory, CryptoRF, dsPIC, flexPWR, HELDO, IGLOO, JukeBlox, KeeLoq, Kleer, LANCheck, LinkMD, maXStylus, maXTouch, MediaLB, megaAVR, Microsemi, Microsemi logo, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, PolarFire, Prochip Designer, QTouch, SAM-BA, SenGenuity, SpyNIC, SST, SST Logo, SuperFlash, Symmetricom, SyncServer, Tachyon, TimeSource, tinyAVR, UNI/O, Vectron, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

AgileSwitch, APT, ClockWorks, The Embedded Control Solutions Company, EtherSynch, Flashtec, Hyper Speed Control, HyperLight Load, Libero, motorBench, mTouch, Powermite 3, Precision Edge, ProASIC, ProASIC Plus, ProASIC Plus logo, Quiet-Wire, SmartFusion, SyncWorld, Temux, TimeCesium, TimeHub, TimePictra, TimeProvider, TrueTime, and ZL are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, AnyIn, AnyOut, Augmented Switching, BlueSky, BodyCom, ClockStudio, CodeGuard, CryptoAuthentication, CryptoAutomotive, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, Espresso T1S, EtherGREEN, GridTime, IdealBridge, In-Circuit Serial Programming, ICSP, INICnet, Intelligent Parallelizing, IntelliMOS, Inter-Chip Connectivity, JitterBlocker, Knob-on-Display, KoD, maxCrypto, maxView, memBrain, Mindi, MiWi, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PowerSmart, PureSilicon, QMatrix, REAL ICE, Ripple Blocker, RTAX, RTG4, SAM-ICE, Serial Quad I/O, simpleMAP, SimpliPHY, SmartBuffer, SmartHLS, SMART-I.S., storClad, SQI, SuperSwitcher, SuperSwitcher II, Switchtec, SyncroPHY, Total Endurance, Trusted Time, TSHARC, USBCheck, VariSense, VectorBlox, VeriPHY, ViewSpan, WiperLock, XpressConnect, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

The Adaptec logo, Frequency on Demand, Silicon Storage Technology, and Symmcom are registered trademarks of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2021-2023, Microchip Technology Incorporated and its subsidiaries.

All Rights Reserved.

ISBN: 978-1-6683-0540-9

For information regarding Microchip's Quality Management Systems, please visit [www.microchip.com/quality](https://www.microchip.com/quality).

---

## Table of Contents

---

<b>Preface .....</b>	<b>5</b>
Introduction.....	5
Intended Use .....	5
Document Layout .....	6
Customer Support .....	6
Document Revision History .....	6
<b>Chapter 1. Introduction</b>	
1.1 Overview .....	7
1.2 Product Features .....	7
<b>Chapter 2. Board Details</b>	
2.1 Electrical Characteristics .....	9
2.2 Connectors .....	9
2.2.1 USB Connector .....	9
2.2.2 Network Connector .....	9
2.3 Jumpers .....	10
2.3.1 Termination .....	10
2.4 LEDs .....	10
<b>Chapter 3. Assembly Plan and Mechanical Dimensions</b>	
3.1 Top View and Mechanical Dimensions .....	11
3.2 Bottom View .....	11
<b>List of Figures .....</b>	<b>13</b>
<b>List of Tables .....</b>	<b>15</b>
<b>Worldwide Sales and Service .....</b>	<b>16</b>

# EVB-LAN8670-USB User's Guide

---

## NOTES:

## Preface

### NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site ([www.microchip.com](http://www.microchip.com)) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXXA”, where “XXXXX” is the document number and “A” is the revision level of the document.

## INTRODUCTION

This chapter contains general information that will be useful to know before using the EVB-LAN8670-USB. Topics discussed in this chapter include:

- Intended Use
- Document Layout
- Customer Support
- Document Revision History

## INTENDED USE

This Microchip product is intended to be used for developing or functional testing of 10BASE-T1S Ethernet network devices by persons with experience in this field of knowledge.

**Note:** The operation of this Microchip product is only admitted with original Microchip devices.  
Do not interfere with the product's original state. Otherwise, user safety, faultless operation and electromagnetic compatibility are not ensured.  
To avoid electric shocks and short circuits use this device only in an appropriate environment.  
This open device may exceed the limits of electromagnetic interference.  
Electromagnetic compatibility can be only achieved if the equipment is built into an appropriate housing.

## DOCUMENT LAYOUT

This user's guide describes how to use the EVB-LAN8670-USB. The document is organized as follows:

- [Chapter 1, Introduction](#) – This chapter introduces the EVB-LAN8670-USB. It shows an illustration of the board and lists the product features.
- [Chapter 2, Board Details](#) – This chapter gives an overview of jumpers, connectors and electrical characteristics.
- [Chapter 3, Assembly Plan and Mechanical Dimensions](#) – This chapter shows the assembly plan (top and bottom views) and the mechanical dimensions of the board.

## CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:

<http://www.microchip.com/support>.

## DOCUMENT REVISION HISTORY

### Revision C (April 2023)

*Document refers to the EVB-LAN8670-USB, EV08L38A-R4 board*

- Updated [Figure 1-1](#), [Figure 3-1](#) and [Figure 3-2](#)

### Revision B (July 2021)

*Document refers to the EVB-LAN8670-USB, EV08L38A-R2 board*

- Removed document status and confidential ranking

### Revision A (May 2021)


- Initial release of this document

## Chapter 1. Introduction

### 1.1 OVERVIEW

The EVB-LAN8670-USB utilizes Microchip's LAN9500A, which is a Hi-Speed USB 2.0 to 10/100 Ethernet controller, to interconnect a USB interface with a 10BASE-T1S Ethernet network interface. Thus, the adapter serves as a network card that connects applications via USB to the 10BASE-T1S network interface.

**FIGURE 1-1: EVB-LAN8670-USB**

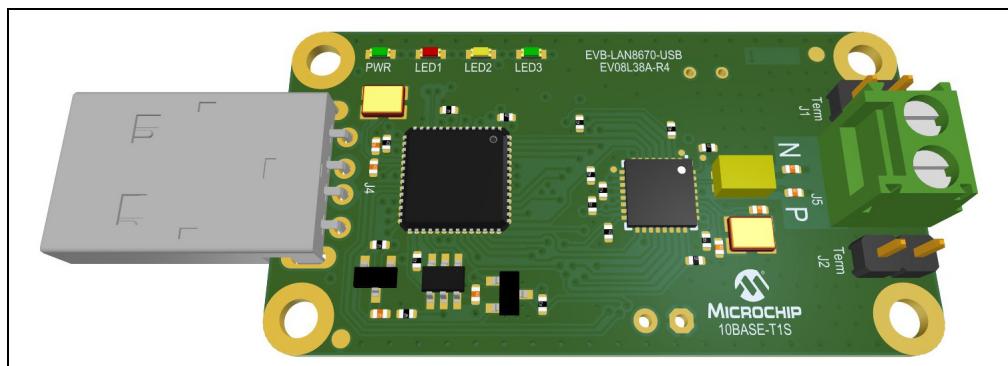

### 1.2 PRODUCT FEATURES

- USB to 10BASE-T1S interface card
- 10 Mbit/s short-reach single-pair Ethernet physical layer transceiver
  - Half-duplex point-to-point link segments
  - Half-duplex multidrop mixing segments
- Connects to a USB host
- Physical Layer Collision Avoidance (PLCA)
- Screw terminal for direct cable connection (no connector needed)
- Configurable on-board termination

# EVB-LAN8670-USB User's Guide

---

## NOTES:

## Chapter 2. Board Details

### 2.1 ELECTRICAL CHARACTERISTICS

Parameter	Min.	Typ.	Max.	Unit
USB Connector Voltage	4.75	5	5.25	V

### 2.2 CONNECTORS

All connectors are mounted on the top side of the board.

#### 2.2.1 USB Connector

The EVB-LAN8670-USB provides a USB connector (J4) to connect to a USB device.

**Type:** 0480370001, standard type A, from Molex®

#### 2.2.2 Network Connector

The network connector (J5) is used as the interface to the network.

**Type:** 691214110002, fixed terminal block, from Würth Elektronik

The terminal pins are described in [Table 2-1](#).

**TABLE 2-1: J5 – PIN DESCRIPTION**

Pin	Description
Terminal 1	TRX_P
Terminal 2	TRX_N

## 2.3 JUMPERS

All jumpers are mounted on the top side of the board. The location of the jumpers is depicted in [Figure 3-1](#).

### 2.3.1 Termination

The termination jumpers (J1 and J2) are used for enabling 100 Ohm edge termination at the ends of a 10BASE-T1S segment.

**Note:** Both jumpers must be closed to enable edge termination.

## 2.4 LEDs

All LEDs are mounted on the top side of the board.

The table below gives an overview of the LEDs and the states they signal.


Name	State	Description
PWR	Off	The EVB-LAN8670-USB is not powered.
	On (green)	The EVB-LAN8670-USB is powered.
LED 1	Off	Future use
	On (red)	
LED 2	Off	
	On (yellow)	
LED 3	Off	
	On (green)	

## Chapter 3. Assembly Plan and Mechanical Dimensions

### 3.1 TOP VIEW AND MECHANICAL DIMENSIONS


The mechanical dimensions are shown in [Figure 3-1](#).

**FIGURE 3-1: ASSEMBLY PLAN – TOP VIEW AND MECHANICAL DIMENSIONS**

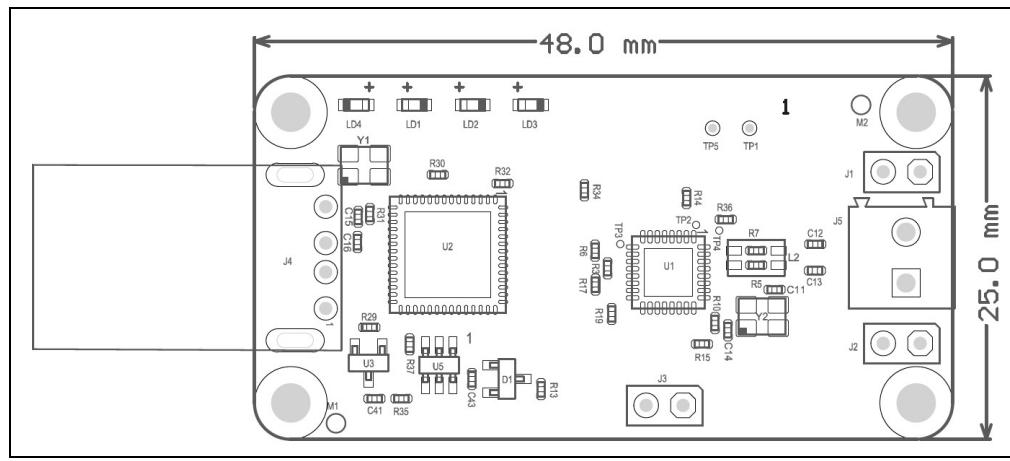

### 3.2 BOTTOM VIEW

**FIGURE 3-2: ASSEMBLY PLAN – BOTTOM VIEW**

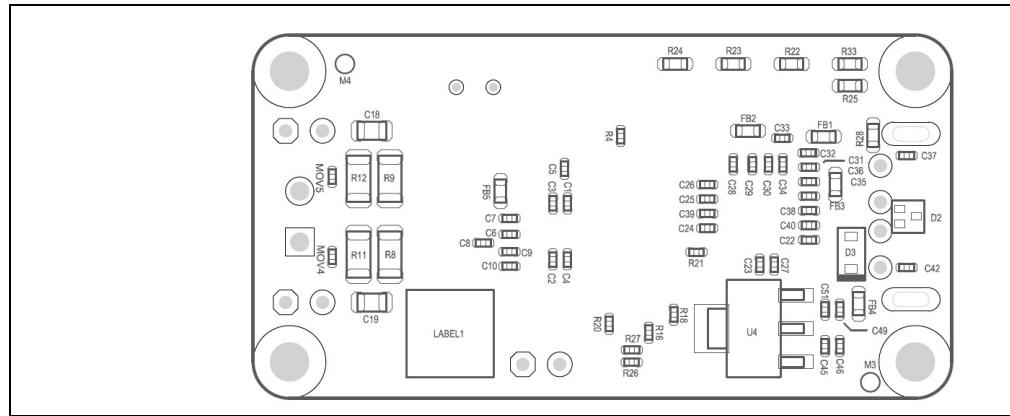

# EVB-LAN8670-USB User's Guide

---

## NOTES:

---

## **List of Figures**

---

Figure 1-1: EVB-LAN8670-USB .....	7
Figure 3-1: Assembly Plan – Top View and Mechanical Dimensions .....	11
Figure 3-2: Assembly Plan – Bottom View .....	11

# EVB-LAN8670-USB User's Guide

---

## NOTES:

**List of Tables**

---

Table 2-1: J5 – Pin Description .....	9
---------------------------------------	---



# MICROCHIP

## Worldwide Sales and Service

### AMERICAS

**Corporate Office**  
2355 West Chandler Blvd.  
Chandler, AZ 85224-6199  
Tel: 480-792-7200  
Fax: 480-792-7277  
Technical Support:  
<http://www.microchip.com/support>  
Web Address:  
[www.microchip.com](http://www.microchip.com)

**Atlanta**

Duluth, GA  
Tel: 678-957-9614  
Fax: 678-957-1455

**Austin, TX**

Tel: 512-257-3370

**Boston**

Westborough, MA  
Tel: 774-760-0087  
Fax: 774-760-0088

**Chicago**

Itasca, IL  
Tel: 630-285-0071  
Fax: 630-285-0075

**Dallas**

Addison, TX  
Tel: 972-818-7423  
Fax: 972-818-2924

**Detroit**

Novi, MI  
Tel: 248-848-4000

**Houston, TX**

Tel: 281-894-5983

**Indianapolis**

Noblesville, IN  
Tel: 317-773-8323  
Fax: 317-773-5453  
Tel: 317-536-2380

**Los Angeles**

Mission Viejo, CA  
Tel: 949-462-9523  
Fax: 949-462-9608  
Tel: 951-273-7800

**Raleigh, NC**

Tel: 919-844-7510

**New York, NY**

Tel: 631-435-6000

**San Jose, CA**

Tel: 408-735-9110  
Tel: 408-436-4270

**Canada - Toronto**

Tel: 905-695-1980  
Fax: 905-695-2078

### ASIA/PACIFIC

**Australia - Sydney**  
Tel: 61-2-9868-6733  
**China - Beijing**  
Tel: 86-10-8569-7000  
**China - Chengdu**  
Tel: 86-28-8665-5511  
**China - Chongqing**  
Tel: 86-23-8980-9588  
**China - Dongguan**  
Tel: 86-769-8702-9880  
**China - Guangzhou**  
Tel: 86-20-8755-8029  
**China - Hangzhou**  
Tel: 86-571-8792-8115  
**China - Hong Kong SAR**  
Tel: 852-2943-5100  
**China - Nanjing**  
Tel: 86-25-8473-2460  
**China - Qingdao**  
Tel: 86-532-8502-7355  
**China - Shanghai**  
Tel: 86-21-3326-8000  
**China - Shenyang**  
Tel: 86-24-2334-2829  
**China - Shenzhen**  
Tel: 86-755-8864-2200  
**China - Suzhou**  
Tel: 86-186-6233-1526  
**China - Wuhan**  
Tel: 86-27-5980-5300  
**China - Xian**  
Tel: 86-29-8833-7252  
**China - Xiamen**  
Tel: 86-592-2388138  
**China - Zhuhai**  
Tel: 86-756-3210040

### ASIA/PACIFIC

**India - Bangalore**  
Tel: 91-80-3090-4444  
**India - New Delhi**  
Tel: 91-11-4160-8631  
**India - Pune**  
Tel: 91-20-4121-0141  
**Japan - Osaka**  
Tel: 81-6-6152-7160  
**Japan - Tokyo**  
Tel: 81-3-6880- 3770  
**Korea - Daegu**  
Tel: 82-53-744-4301  
**Korea - Seoul**  
Tel: 82-2-554-7200  
**Malaysia - Kuala Lumpur**  
Tel: 60-3-7651-7906  
**Malaysia - Penang**  
Tel: 60-4-227-8870  
**Philippines - Manila**  
Tel: 63-2-634-9065  
**Singapore**  
Tel: 65-6334-8870  
**Taiwan - Hsin Chu**  
Tel: 886-3-577-8366  
**Taiwan - Kaohsiung**  
Tel: 886-7-213-7830  
**Taiwan - Taipei**  
Tel: 886-2-2508-8600  
**Thailand - Bangkok**  
Tel: 66-2-694-1351  
**Vietnam - Ho Chi Minh**  
Tel: 84-28-5448-2100

### EUROPE

**Austria - Wels**  
Tel: 43-7242-2244-39  
Fax: 43-7242-2244-393  
**Denmark - Copenhagen**  
Tel: 45-4485-5910  
Fax: 45-4485-2829  
**Finland - Espoo**  
Tel: 358-9-4520-820  
**France - Paris**  
Tel: 33-1-69-53-63-20  
Fax: 33-1-69-30-90-79  
**Germany - Garching**  
Tel: 49-8931-9700  
**Germany - Haan**  
Tel: 49-2129-3766400  
**Germany - Heilbronn**  
Tel: 49-7131-72400  
**Germany - Karlsruhe**  
Tel: 49-721-625370  
**Germany - Munich**  
Tel: 49-89-627-144-0  
Fax: 49-89-627-144-44  
**Germany - Rosenheim**  
Tel: 49-8031-354-560  
**Israel - Ra'anana**  
Tel: 972-9-744-7705  
**Italy - Milan**  
Tel: 39-0331-742611  
Fax: 39-0331-466781  
**Italy - Padova**  
Tel: 39-049-7625286  
**Netherlands - Drunen**  
Tel: 31-416-690399  
Fax: 31-416-690340  
**Norway - Trondheim**  
Tel: 47-7288-4388  
**Poland - Warsaw**  
Tel: 48-22-3325737  
**Romania - Bucharest**  
Tel: 40-21-407-87-50  
**Spain - Madrid**  
Tel: 34-91-708-08-90  
Fax: 34-91-708-08-91  
**Sweden - Gothenberg**  
Tel: 46-31-704-60-40  
**Sweden - Stockholm**  
Tel: 46-8-5090-4654  
**UK - Wokingham**  
Tel: 44-118-921-5800  
Fax: 44-118-921-5820